

Fig. 1

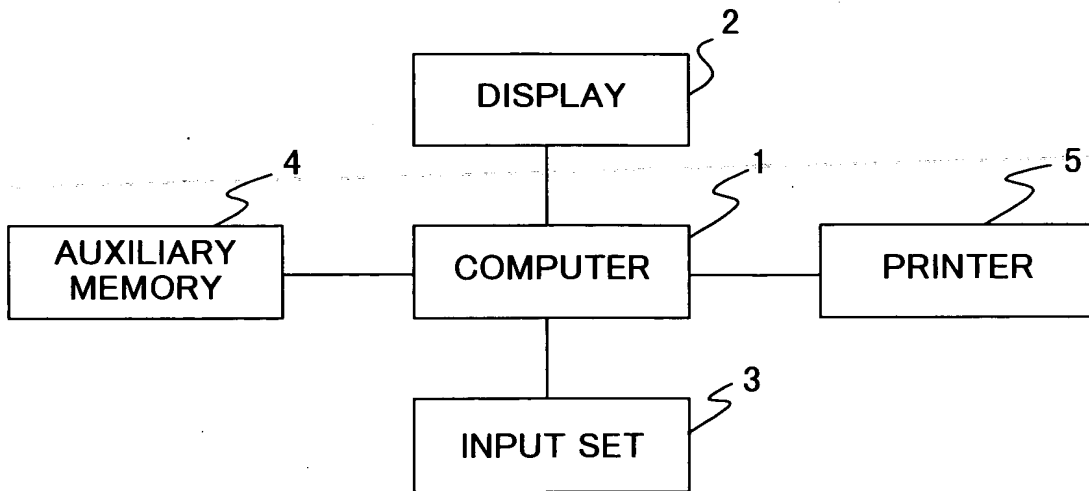


Fig. 2

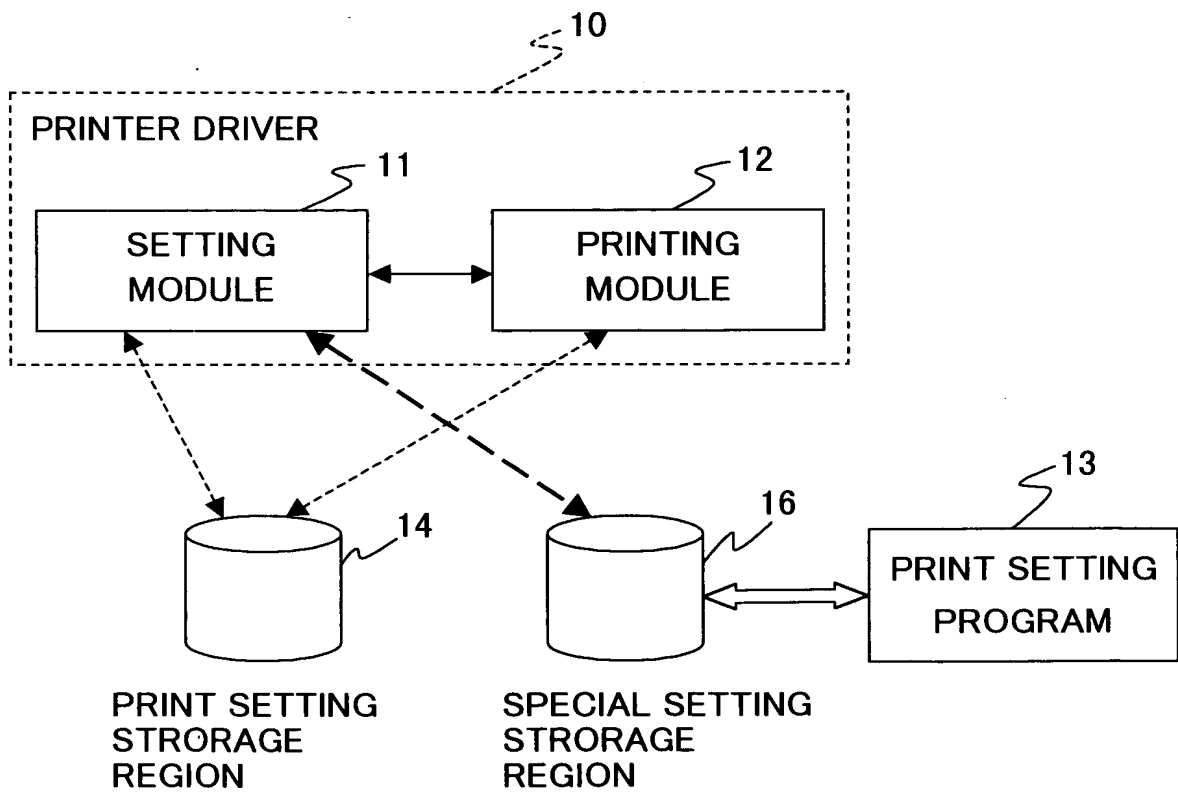


Fig. 3

?

x

Page Setup

Advanced

Device Options

Mailbox Setup

Output Bin

Standard Output Tray

Stacker [up to Tray 5]

Sorter [up to Tray 5]

Tray 1

Tray 2

Tray 3

Tray 4

Tray 5

☐ Use Standard
Tray when FULL

Tray type

☐ No Tray
☐ 5 Tray
☒ 10 Tray

Select Number of Mailboxes

5 Mail Boxes

Edit Mailbox

User Name...

User Setting

Save As

Delete

☒ Use Quick Setup monitor

OK

Cancel

Help

Fig. 4

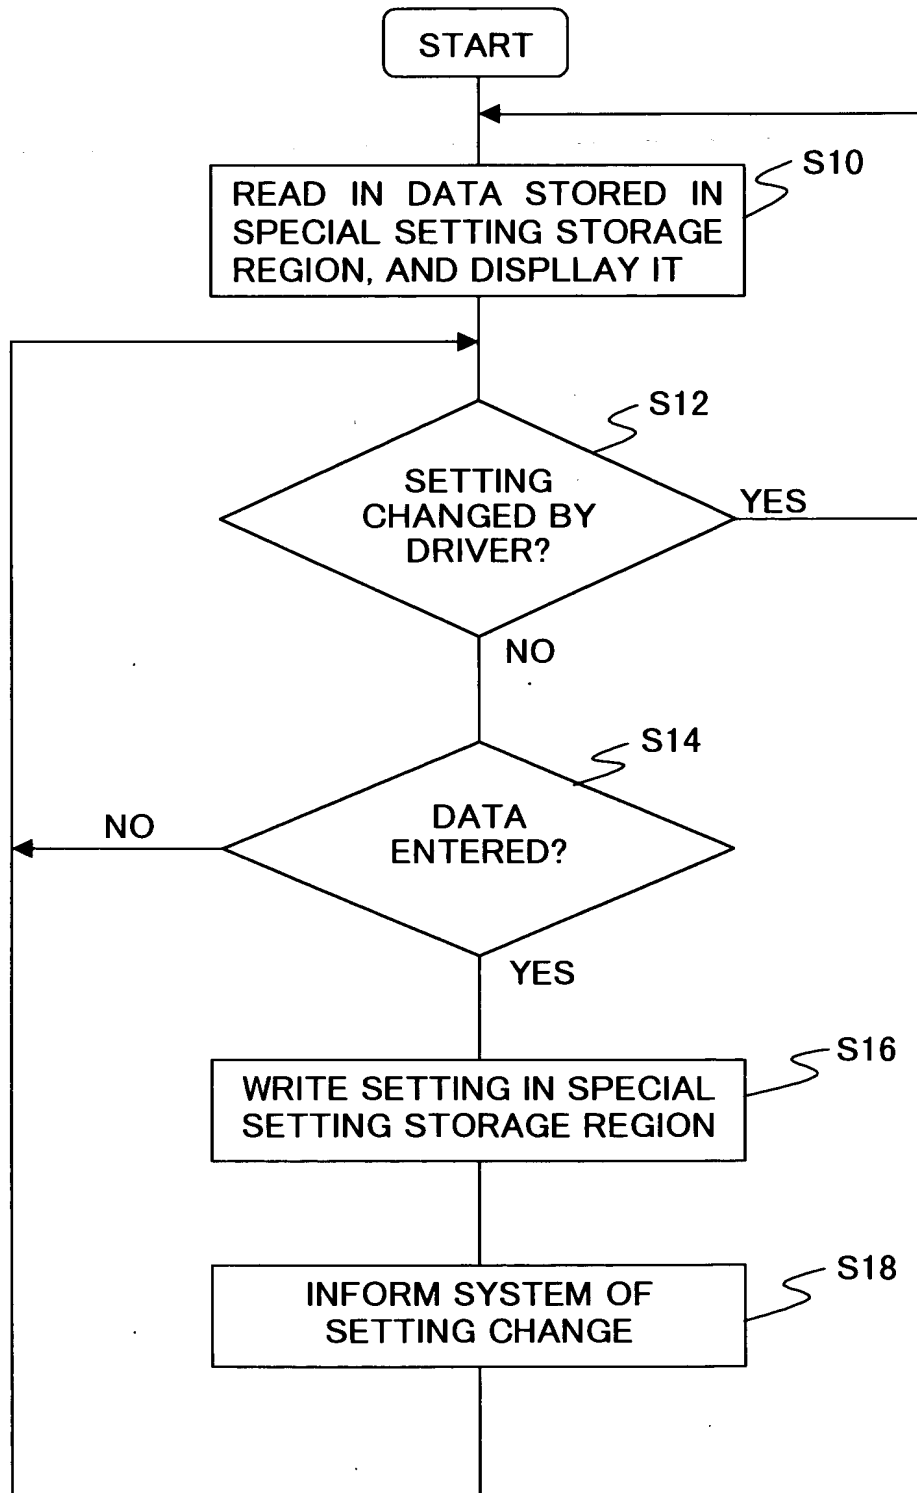


Fig. 5

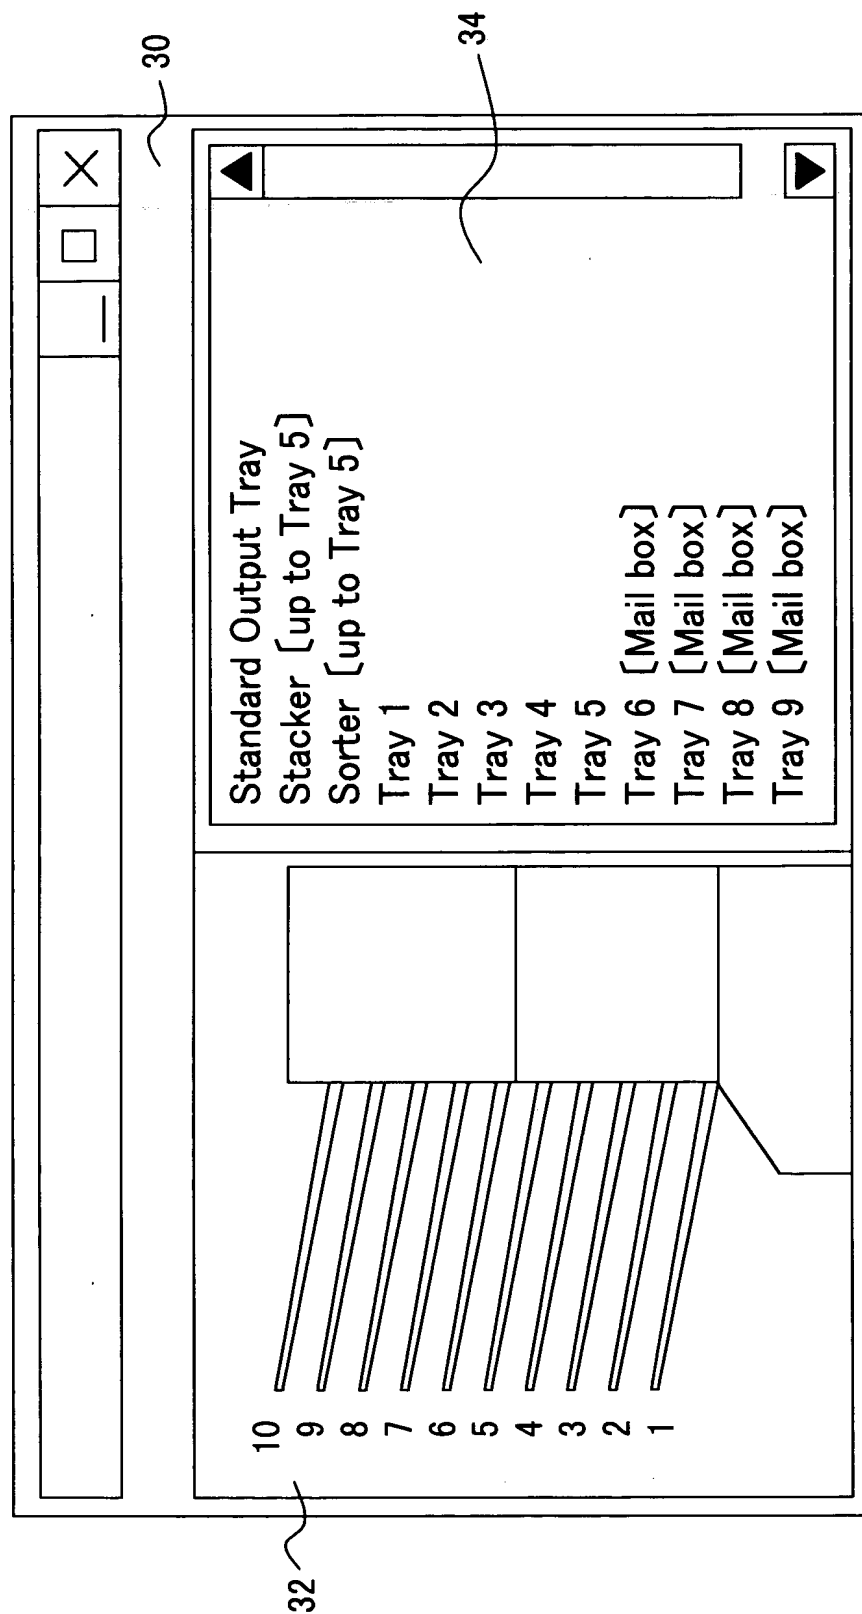


Fig. 6A

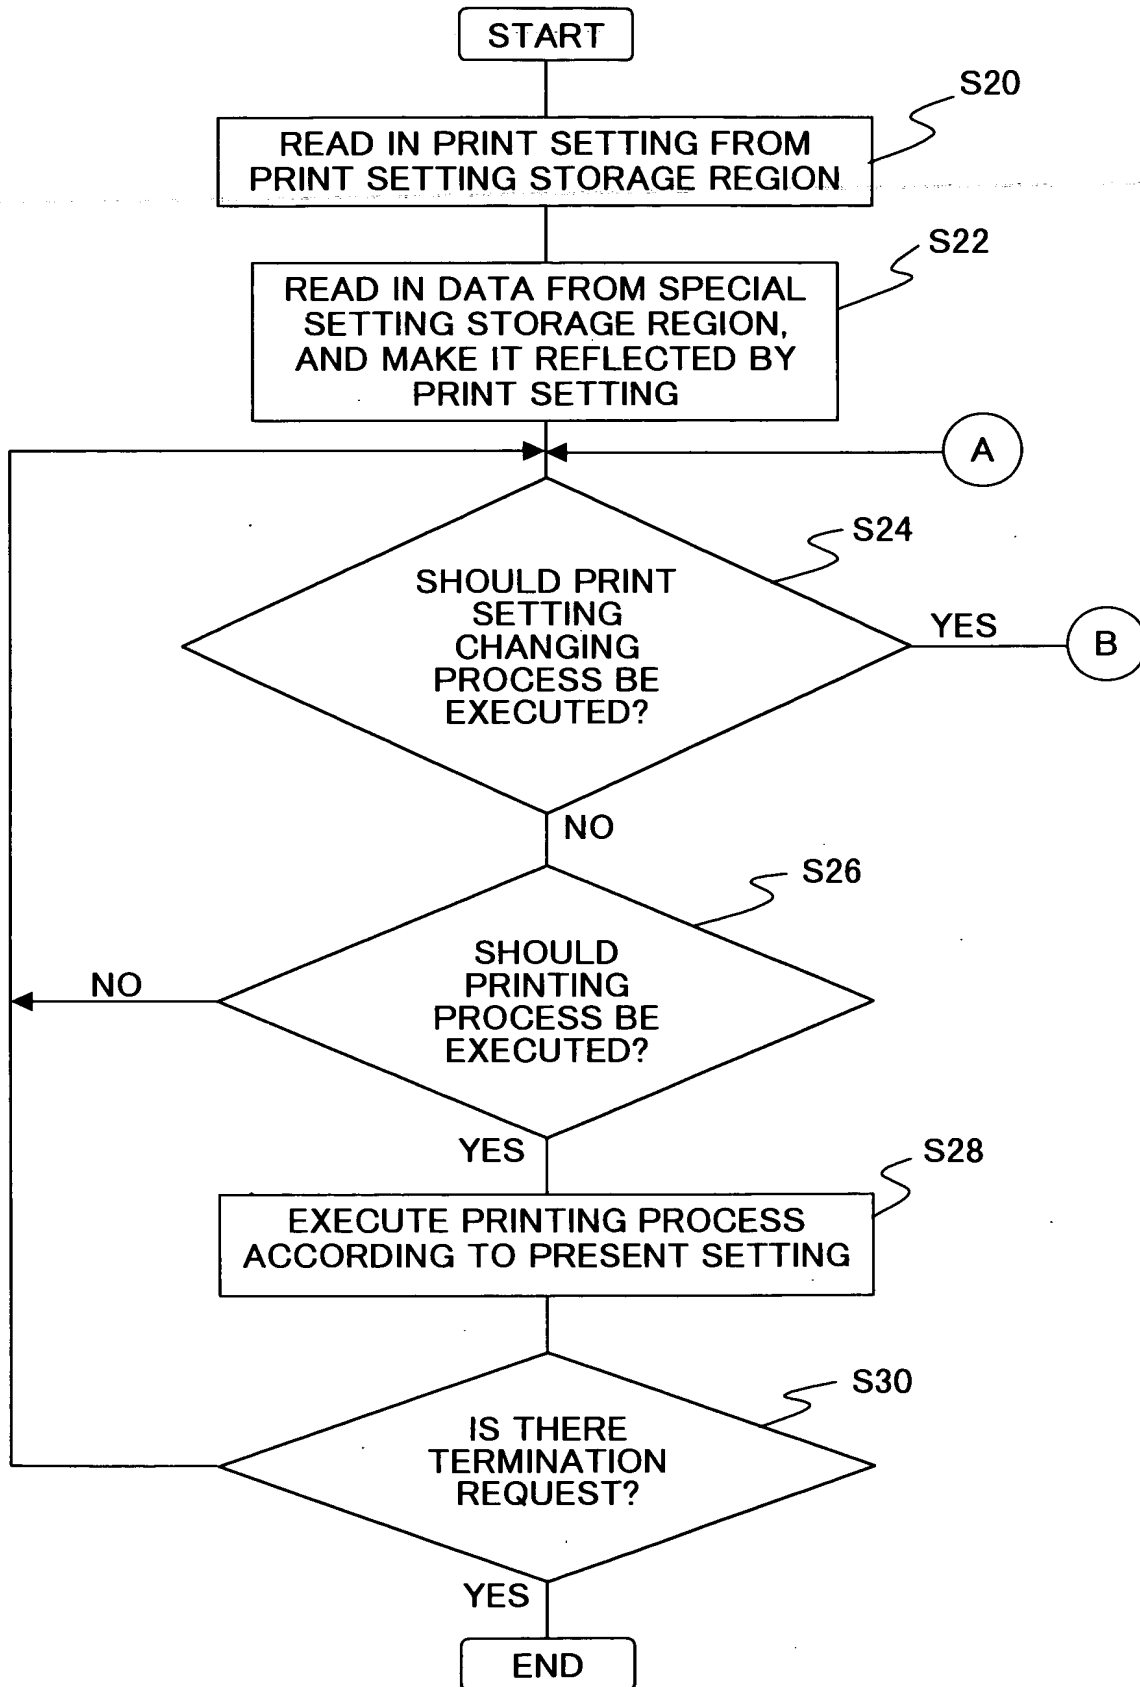


Fig. 6B

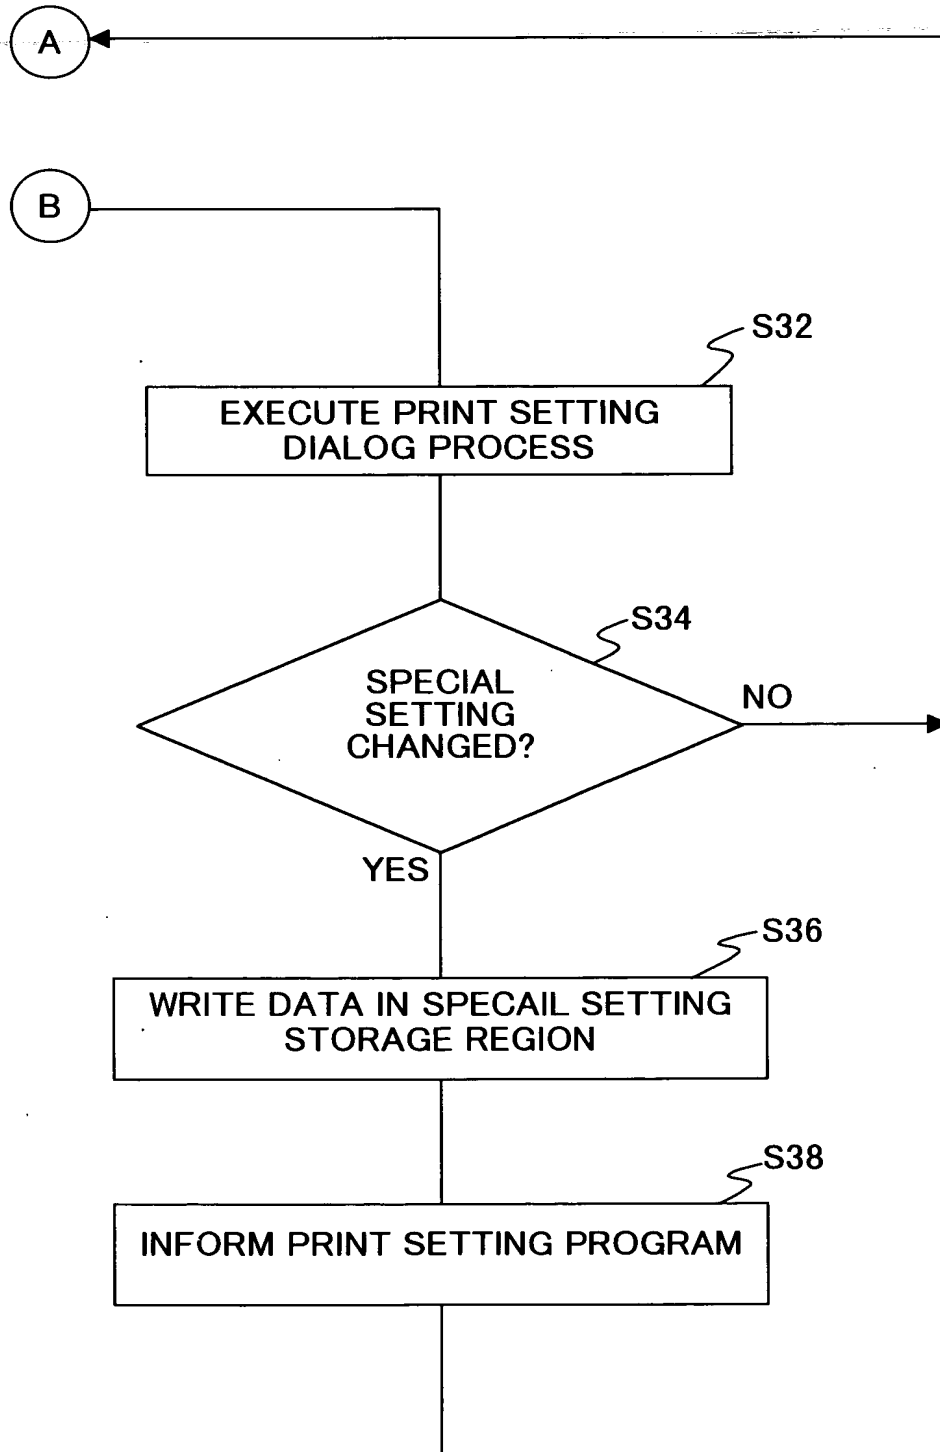


Fig. 7

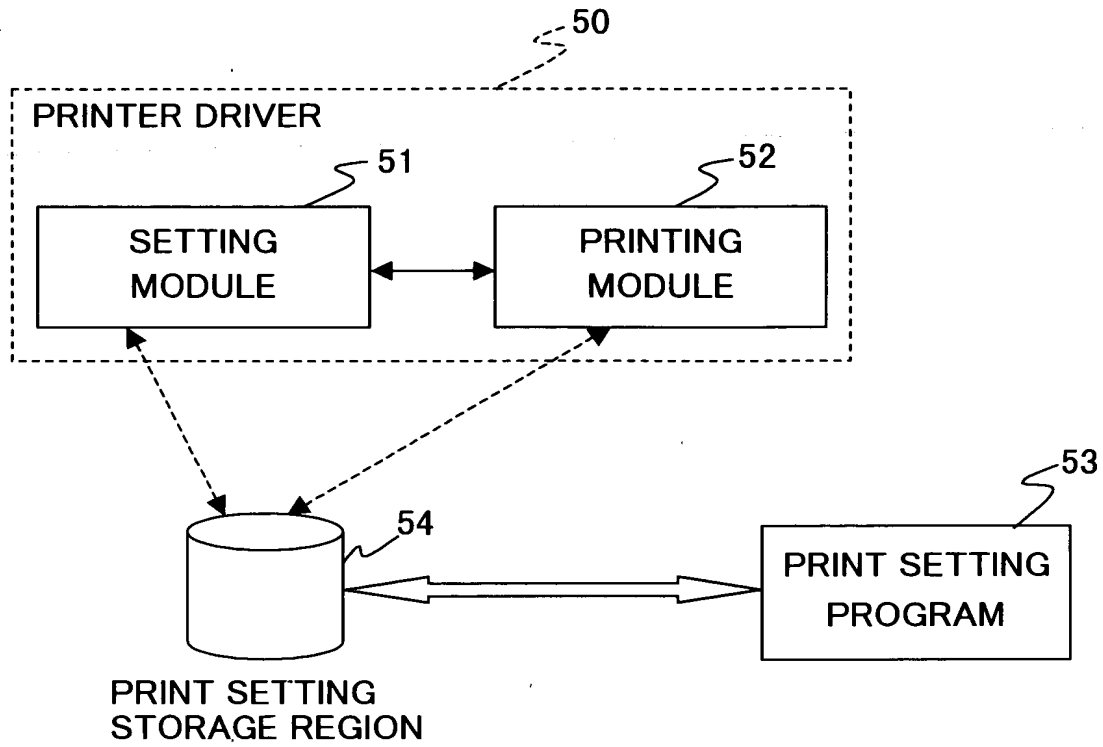


Fig. 8

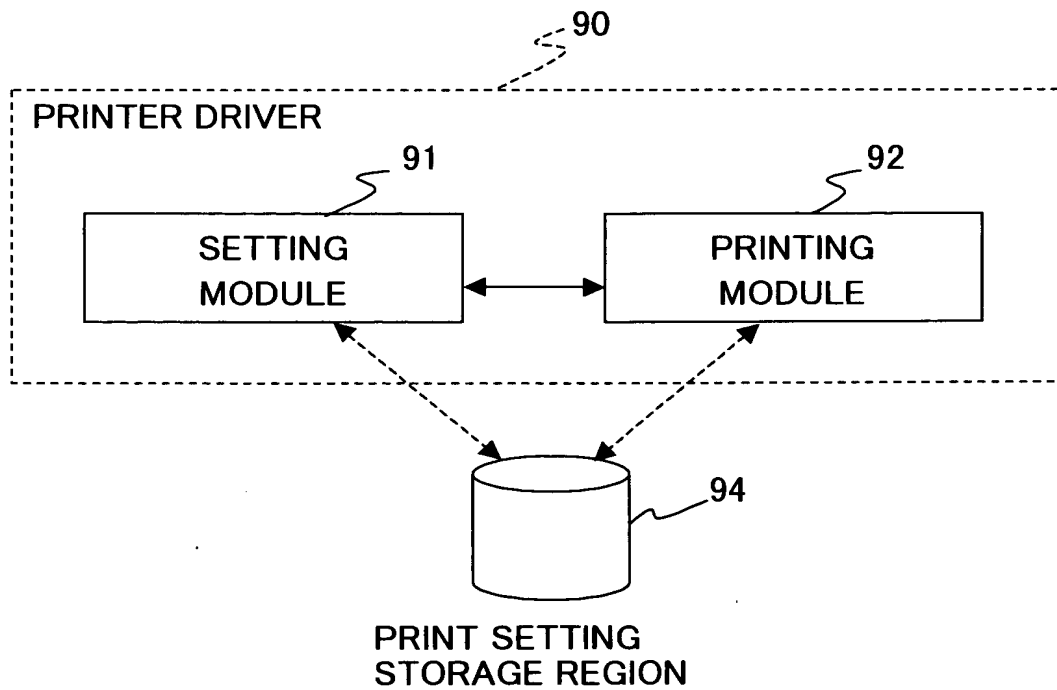


Fig. 9

?

x

Printer

OO-OOOO series

▼

Properties

Name:

Status: Ready

Type: OO-OOOO series

Where: LPT1:

Comment:

☐ Print to file

Print range

☒ All
 ☐ Pages from: 1 to:

Copies

Number of copies: 1

OK

Cancel

Fig. 10

112

111

114

113

Page Setup Advanced Device Options Mailbox Setup

Paper Size: Letter 8 1/2 x 11 in

Paper Source: Automatically Select

Copy Count: 1 [1- 999]

Orientation

☒ Portrait ☐ Landscape

OK Cancel Help

Fig. 11

The dialog box is titled "Mailbox Setup" and has four tabs: "Page Setup", "Advanced", "Device Options", and "Mailbox Setup". The "Mailbox Setup" tab is currently selected. At the top of the dialog is a title bar with a question mark icon and a close button (X). The main content area is divided into several sections:

- Output Bin**: A list box containing "Standard Output Tray", "Stacker [up to Tray 5]", "Sorter [up to Tray 5]", "Tray 1", "Tray 2", "Tray 3", "Tray 4", and "Tray 5". Below the list is a checkbox labeled "Use Standard" and the text "Tray when FULL".
- Tray type**: Three radio buttons labeled "No Tray", "5 Tray", and "10 Tray". The "10 Tray" option is selected.
- Select Number of Mailboxes**: A text box containing "5" and a dropdown arrow.
- Edit Mailbox**: A text box labeled "User Name. . .".
- User Setting**: A text box with a dropdown arrow.

At the bottom of the dialog are three buttons: "Save As", "Delete", and "Edit Mailbox". At the very bottom are three buttons: "OK", "Cancel", and "Help".

Fig. 12

